【售後服務保證卡】

- 本公司銷售之音樂鈴出廠前經嚴格品管。在正確使用及保養下應能 正確地表現其優越性能,本產品從購買日期開始,享有一年內免費 維修之售後服務。
- 本保證卡如有遺失,恕不補發,敬請妥善保存。
- 本保證卡所提供之售後服務,不適用下列情況:a.使用不當或不慎 摔落、泡水,潮濕所造成之故障及損壞。b.自行拆裝所發生之破損 或故障等恕不列入保證範圍。c.因火災、地震、水災、打雷、以及 其他公害、異常電壓等造成故障。
- 為保證顧客之權益,請務必填寫購買日期並加蓋經銷商之店章,否則本公司將以本產品之製造日作為保證期之起算日。
- 未經本公司經銷商蓋章,或塗改購買日期者,一律視為無效。
- 本保固書僅限台灣使用。

購買日期:		
產品貨號:	KU7082 酷咕鴨可愛動物任意夾音樂鈴	
姓名:		
電話:		
地址:		店章:
店家:		

与に対している。
 古に實具國際股份有限公司 JINI BABY INTERNATIONAL CO.,LTD. No.27, Lane 290, Sec.2, Jia Dong Road, Changhua City 500, Taiwan 500彰化市茄苳路二段290巷27號 統一編號: 12617114 原産地:中國網址: www.kukuduckbill.com 電話: 04-7357958 Made in China

注意事項 Caution

- 請勿獨自留下寶寶在無人照顧下的情況使用產品。
- 產品應由成人安裝。
- 根據說明書指示,所有提供的配件應時常牢固安裝於嬰兒床或遊戲床。 及進行定期檢查。
- 重要! 我們建議產品應安裝於嬰兒床的固定及不能上下移動的側欄上。
- 此玩具用於視覺刺激,不適合給兒童抓握。
- 使用前,應把所有包裝棄置。避免窒息危險。

避免纏繞傷害

- 請勿讓嬰兒接觸
- 當實實開始學習用雙手或膝蓋支撐站立時,應把音樂鈴從嬰兒床或遊戲床 拆除。
- 請勿在嬰兒床或遊戲床上添加額外的繩子或帶子。
- Do not leave your children unattended for any time.
- Adult assembly required.
- Always attach all provided fasteners tightly to the crib or playpen according to the instructions. Check frequently.
- **IMPORTANT!** We recommend attaching this toy to a crib side that is fixed and cannot move up or down.
- This toy is intended for visual stimulation and is not intended to be grasped by a child.
- Remove all packaging materials before use. Suffocation Hazard.

Prevent Entanglement Injury

- Keep out of baby's reach.
- Remove the mobile from the crib or playpen when the baby begins to push up on his hands and knees.
- Do not add additional strings or straps to attach to the crib or playpen.

保養方法

Product Care

1.5V AA 鹼性電池x3顆

nsert 3 fresh AA 1.5V batteries

- ·玩偶可以於水溫30°C以下清洗。
- 使用微濕濕布清潔音樂盒與配件,請勿把音樂盒沉於水中。
- 應將產品放置遠離被太陽直射的地方,及避免與任何熱源接觸。
- · 請勿將本產品掉落在堅硬的表面上,也不要將產品暴露於濕氣或水中。
- · Dolls can be hand-washed with water temperature below 30°C.
- To clean the music box, wipe it with a slightly damp cloth. Do not immerse in water.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

電池注意事項

- 建議使用標準電池(鹼性電池)
- 請勿混用新舊電池
- 請勿混合使用鹼性電池 、碳鋅電池或充電電池
- 請依正負極指示安裝電池
- 電池只能由成人更換
- 超過一個月不使用,請取出產品內的電池
- 請勿任意丟棄用過的電池,請依環保規定回收
- 使用 3 顆 AA (1.5V) 電池(不含)

現定回收 (

Battery Safety Information

- We recommend alkaline batteries for longer battery life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with the correct polarity.
- Batteries should be replaced by adults only.
- If you do not use the product more than one month, please remove the batteries from the product.
- Dispose of batteries in a safe and appropriate manner.
- Uses 3 AA (1.5V) batteries (not included).



可愛動物任意夾音樂鈴 使用說明書









請在使用前閱讀並保留此手冊,以供將來使用。 如果沒有按照說明使用,產品效能可能會受到影響。 Please read and retain this manual for future use before use. If not used as intended, the maximum efficacy of the product may be affected. 柔和旋律音樂,可安撫舒緩寶寶情緒。

旋轉的可愛動物玩偶,增加探索樂趣。

The eye-catching colors stimulate baby's sense of sight.

Soothing baby with relaxing tunes and slow motion.

Rotating and cute animal dolls for fun of exploration.

適用年齡:0個月以上

產品材質: ABS塑膠、聚酯纖維

Suitable Age: 0 Month and Above

Material: ABS, Polyester

組件內容 Parts List




固定夾 Crib Adaptor


音樂盒 Music Box

玩偶(3隻) Dolls (3 pcs)


方法 _________As

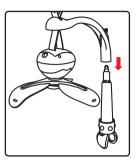

 將音樂鈴固定夾和支架連接在一起。
 Click together the Crib Adaptor and Mobile Arm.

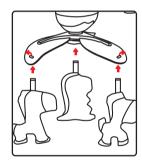

2. 將玩偶組裝在音樂盒上。
Attach the dolls on the hook of the Mobile Box.

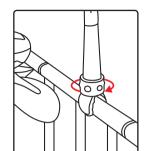


3. 將固定夾放於床欄上,順時針轉動支架下方的固定環並且轉緊。

注意:請安裝於堅固的位置上; 安裝時請勿將嬰兒放置於床上

Place the Crib Adaptor on the crib rail, and turn the ring at the bottom of the Mobile Arm clockwise to tighten.

Note: Please fix the crib adaptor on the in a sturdy surface. Do not leave baby on the crib when assembling the musical mobile.

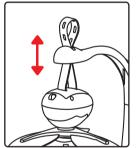

4. 音樂盒主體可依需求調節高低。

The Music Box can be adjusted in height according to needs.



MUTE



U/1







三種模式設定:關/開/靜音

- 1. 將開關切換至"開"。音樂鈴開始轉動,連續音樂開始播放。
- 2. 要在沒有音樂的情況下使用,請將開關切換至"靜音"。
- 3. 要停止音樂鈴,請將開關切換至"關"。

Three modes setting: OFF / ON / MUTE

- 1. Slide the switch to the "ON". The continuous music will play and the mobile will turn.
- 2. To operate your mobile without music, slide the switch to the "MUTE".
- 3. To stop the mobile, slide the switch back to the "OFF".