



委製商/進口商：

 吉尼寶貝國際股份有限公司 JINI BABY INTERNATIONAL CO.,LTD.
No.27, Lane 290, Sec.2, Jia Dong Road, Changhua City 500-84, Taiwan
500-84 台灣彰化市茄苳路2段290巷27號 電話：04-7357958
統一編號：12617114 原產地：中國 Made in China



酷咕鴨
高景觀 換向手推車 使用手冊

High Landscape Two-Way Stroller Instruction Manual

重要！請詳細閱讀並妥善保存作日後參考之用

關於推車

商品名稱：酷咕鴨高景觀換向手推車

商品型號：KU6046

適用年齡：0~36個月之嬰幼兒

最大年齡：36個月之嬰幼兒

最大體重：15公斤以下的嬰幼兒

展開尺寸：91x57x102cm

收合尺寸：57x40x78cm

產品重量：7.9公斤

主要材質：鐵管、塑膠、聚酯纖維

功能特點


- 高景觀設計，可避開地面灰塵並提供寶寶寬闊的視野。
- 可換向推車手把，方便讓您隨時照顧您的寶寶。
- 5 點式安全帶上附有反光條，增加夜間推行安全。
- 無段式椅背調節，可調整不同角度滿足寶寶的所有需求。
- 頂篷附有抗UV網，保護寶寶免受紫外線和蚊蟲的傷害。
- 單手收合一體式折疊設計，使推車容易收合且方便攜帶。

零件圖



1

前扶手 x 1

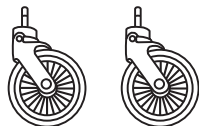


2

前輪 x 2



3


後輪 x 2

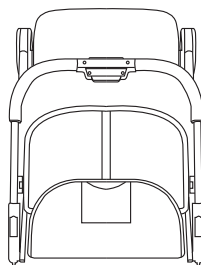

4

車架 x 1

部位說明

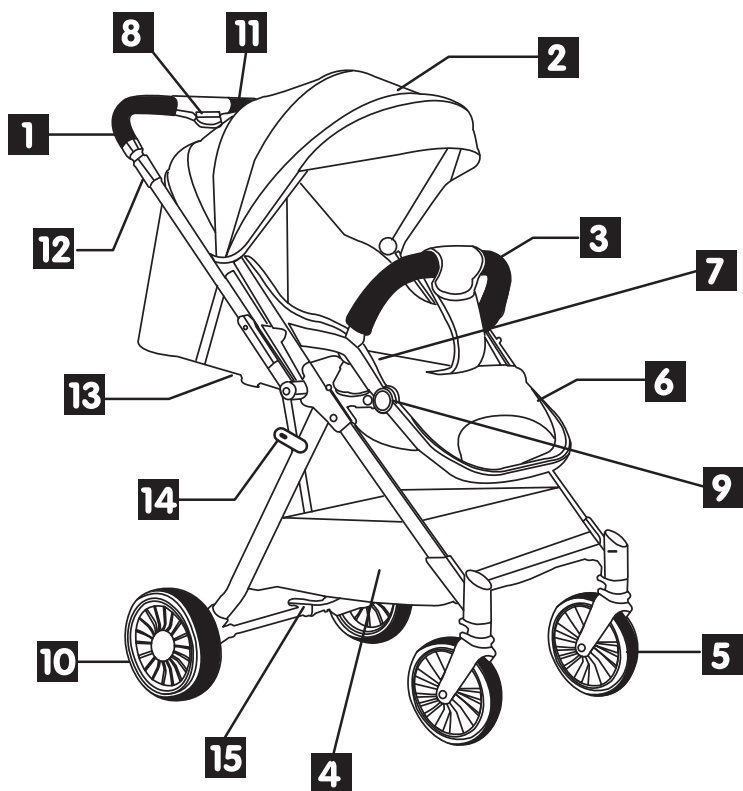

- | | |
|---------------|----------|
| 1.換向手把 | 9.腿靠調節按鈕 |
| 2.遮陽蓬 | 10.後輪 |
| 3.可拆前扶手 | 11.二道鎖按鈕 |
| 4.置物籃 (限重3公斤) | 12.換向鍵 |
| 5.前輪 | 13.椅背調節件 |
| 6.腿靠 | 14.收車鉤 |
| 7.五點式安全帶 | 15.煞車踏板 |
| 8.收合按鈕 | |





WARNING 警告

- 切勿留置嬰幼兒無人照顧。
- 使用前，確保所有鎖定裝置皆已正確嚙合。
- 為避免傷害，確保展開與折疊本產品時與兒童保持距離。
- 不要讓兒童玩弄本產品。
- 務必隨時使用束縛系統。
- 避免因掉出或滑出而導致重傷，須隨時使用五點式安全帶將幼童固定。
- 本產品僅設計供步行使用，不適合跑步或滑冰。
- 為防止事故發生，確保手推車遠離自動閉合之門。
- 本產品最大承重為15公斤，只可載一名孩童，請勿超重。
- 本推車適合年齡為0-3歲，靠背和座椅之間的角度小於150°時，不適用於0-6個月的嬰兒使用。
- 請勿在推車把手上附掛任何物品，以防影響推車的穩定性。
- 僅限使用由製造商或經銷商所供應之替換零件，請勿隨便更換或使用非製造商認可之任何配件。
- 將嬰兒上下車時請將煞車固定，以免推車滑動。

保養維護

- 為了確保您的寶寶免受意外傷害，請經常對本產品進行檢查和保養。
- 定期檢查是否有螺絲鬆動、零件損壞或縫線斷裂痕跡，如有必要請更換破損的部件。
- 布套和配件，可以使用溫和的肥皂水清潔，並保持自然晾乾，不要直射陽光。
- 局部髒汙，可以用稀釋的清潔劑，以濕棉布或海綿清除汙漬，並在折疊或儲存前完全晾乾。
- 車架清理: 髒汙時及時使用軟布擦拭乾淨，並用乾布擦乾。請勿使用刺激性化學品或漂白劑進行清潔。
- 請勿長時間曝曬在陽光下或接近強熱源，避免零件老化或布料褪色。
- 長時間不使用請將推車儲存在通風良好的地方避免發霉和生鏽。
- 剎車和車輪比其他部件容易磨損，必要請與本公司維修中心連絡。


組裝說明

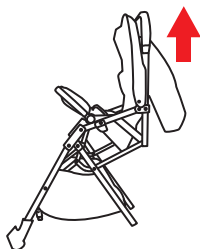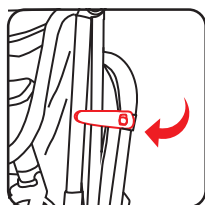

1. 展開車台：


解開收車鉤，握住推車手把順勢往上提，讓折疊車架鎖定到直立位置，聽到「咖搭」聲表示車台已鎖定，即完成展開

⚠警告 使用前確保所有鎖定裝置都已鎖定。

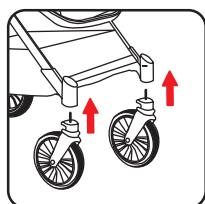


2. 安裝前輪：

按圖所示方向將前輪下座套上前輪中軸，聽到「咖搭」一聲即裝上前輪，向下拉動輪子，確保輪子不會脫落。拆卸時按壓內側上的金屬片同時向下拉，拆卸完成。

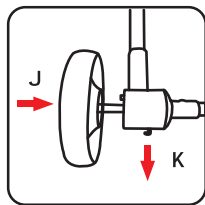

3. 安裝後輪：

按圖所示將 (J) 處輪軸往裡推至底部，安裝完成。拆卸時往下拉動 (K) 處金屬片同時往外拉動後輪，即拆卸完成。

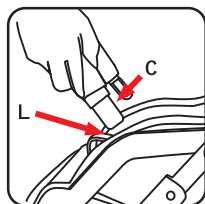


4. 安裝扶手：

按圖所示，雙手拿著扶手對準側邊扶手插孔 (L) 用力向下推，直到聽到「咖搭」一聲即可。拆卸時將扶手內側插扣片 (C) 撥開，並向上拔即可拆卸扶手。


5. 在確保輪組已安裝好且車台所有安全裝置全部鎖定後將車台推行一圈，確定無異常即可使用。

■ 使用說明

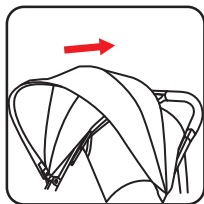


6. 使用遮陽篷：

按圖所示，往箭頭方向向前拉動即可打開，反之則可收合。

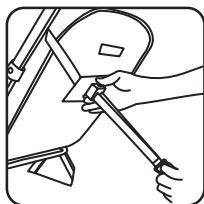

7. 椅背調節：


如圖所示，一隻手拉住椅背調節帶，另一隻手抓住椅背調節件並按住按鈕向上或向下滑動即可將椅背調節到寶寶舒適的任何角度。

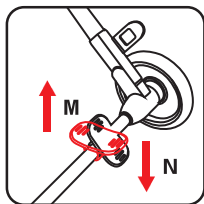

8. 後輪煞車：



如圖所示，當推車不需要推行時，請務必向下踩（N）煞車踏板即可煞住車台。需要推行時向上鉤（M）煞車踏板即可釋放煞車。

⚠警告 為了寶寶安全，車子不移動時必須把車煞住，以免滑動造成危險發生！

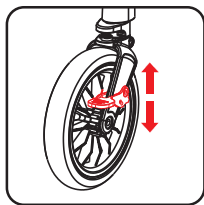

9. 前輪煞車：



如不需推行時將煞車鍵按下，即煞住車台，需要推行時向上抬起煞車鍵，即可釋放煞車。

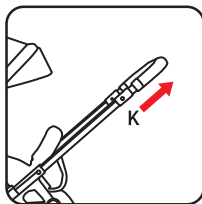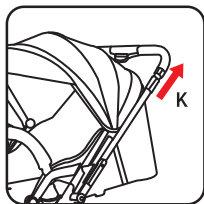

10. 手把換向：

在使用的過程中，推車手把可換向，方便寶寶面向前方或面向父母。如圖所示，雙手握著換向鍵(K)並向上抬起，然後將手把向前推到另一側，即可完成換向。

使用說明

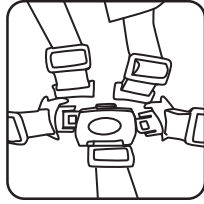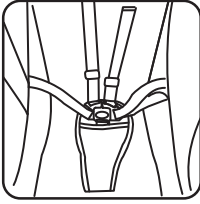


11. 五點式安全帶：

如圖所示，將寶寶的手臂分別穿過左右兩邊安全肩帶，然後將左右兩邊插扣扣到跨帶安全扣上，向外拉動確保不會滑脫。需要拆卸時按下安全扣中間按鈕，向兩邊拉即可拆開。


警告

為了寶寶安全，請隨時使用安全帶，請將跨帶穿過寶寶兩腿之間並扣緊安全扣！

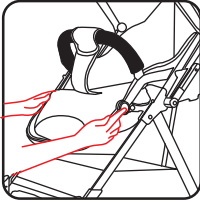


12. 調整腳靠：

如圖所示，同時按下腳靠下方左右兩側按鈕，聽到「咖搭」聲即完成固定。

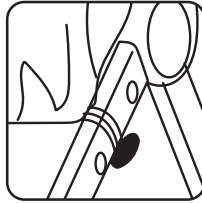


13. 抗UV網：

如圖所示，沿遮陽蓬拉開拉鍊取出抗UV網，並固定於兩側車架。

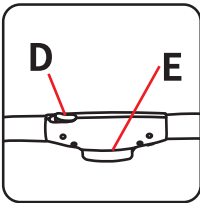

14. 收合車台：

當車台不需使用時，先握住收合按鈕，用拇指按往左按壓二道鎖按鈕（D），四指用力按壓收合按鈕（E），按壓到底後將手把向下壓，直到車架收合完成。車架完全收合後，收車鉤（F）將自動鉤上。如圖所示即收車完成。

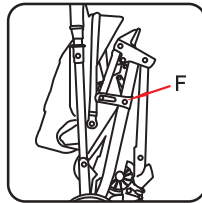

保固與售後服務

- 1.本公司銷售之手推車出廠前經嚴格品管，在正確使用及保養下應能正確地表現其優越性能
- 2.本產品自購買日期開始，享有一年內免費維修之售後服務(運費恕不在此列內)
- 3.本保證卡如有遺失，恕不補發，敬請妥善保存
- 4.本保證卡所提供之售後服務，不適用下列情況：
 - (1)使用不當或不慎摔落、泡水、潮濕所造成之故障及損壞
 - (2)自行拆裝所發生之破損或故障等，恕不列入保證範圍
- 5.為保證顧客之權益，請務必填寫購買日期並加蓋經銷商之店章，否則本公司將以本產品之製造日作為保證期之起算日；線上購買將以下單當日為起算日
- 6.未經本公司經銷商蓋章，或塗改購買日期者，一律視為無效

【售後服務保證卡】		
購買日期：	貨號：KU6046 酷咕鴨高景觀換向手推車	
姓名：	電話：	店章：
地址：	店家：	



KU·KU Duckbill
High Landscape
Two-Way Stroller

Instruction Manual

IMPORTANT- READ CAREFULLY AND
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

About

KU.KU Duckbill High Landscape Two-Way Stroller

Item No. : KU6046

Applicable Age: 0 to 36 months

Maximum Weight: below 15 kg

Product Size : 91x57x102cm

Folded Size : 57x40x78cm

Material: Iron, Plastic, Polyester


Feature

- High landscape design protect your baby from ground dust and gives a wider field of vision.
- The reversible handle bar allow you always keep an eye on your baby.
- Stepless backrest adjustment provides different angle of backrest to meet all your baby's need.
- Extended canopy with Anti-UV Shield can protect your baby from UV and mosquito.
- 5-point safety belt with reflective piping ensure the safety at night.
- One-hand folding design makes it easy to fold and carry out.

Parts List




1
Bumper x 1

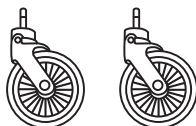

2 Front Wheels x 2




3 Rear Wheels x 2

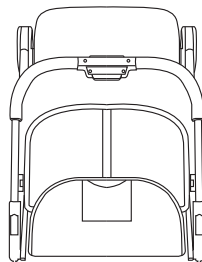

4 Frame x 1

Parts Name

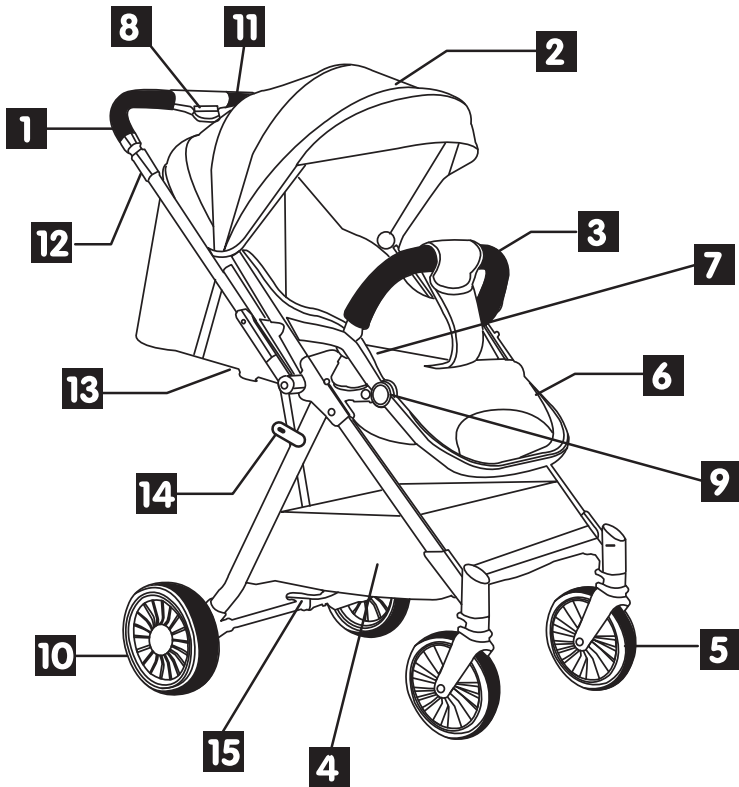

- | | |
|------------------------|------------------------|
| 1. Handlebar | 8. Fold Button |
| 2. Canopy | 9. Footrest Adjuster |
| 3. Bumper | 10. Rear Wheel |
| 4. Basket (Max 3kgs) | 11. Second Lock Button |
| 5. Front Wheel | 12. Reversible Button |
| 6. Footrest | 13. Backrest Adjuster |
| 7. 5-Point Safety Belt | 14. Lock Hook |
| | 15. Brake Lever |



WARNING

- Never leave the child unattended.
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that the child is kept away when unfolding and folding this product.
- Do not let the child play with this product.
- Always use the restraint system.
- Avoid serious injury from falling or sliding out. Always use seat belt.
- This product is designed for walking use only, not suitable for running or skating.
- To prevent accidents, keep the stroller away from the door that closes automatically.
- The maximum load for the baby stroller is 15kg and overload forbidden. This baby stroller is designed for one child.
- The baby stroller is suitable for baby 0-3 years and is not suitable for infants aged 0-6 months when the angle between the backrest and seat is less than 150°.
- Any load attached to the handle affects the stability of the stroller.
- Only replacement parts supplied by the manufacturer/distributor shall be used.
- Any accessories which are not approved shall not be used.
- Make sure the baby stroller is braked when placing and removing the children.

CARE AND MAINTENANCE

- It is necessary to check and maintenance often to avoid your baby from any injury by accident.
- Check regularly if there are loosen screws, damaged parts or crack in cloth replace them as necessary.
- Wipe the fabric with mild soap and cold water and let it air dry.
- For especially dirty parts, please diluted detergent and clean it with damp cotton cloth or sponge.
- Wipe the metal and plastic parts of the stroller with a wet cloth then wipe it dry after that. Do not use harsh chemicals or bleach for cleaning.
- Do not let your stroller in direct sunlight or near strong heat sources for a long time. Otherwise, the plastic and fabric parts will fade.
- Leave the stroller in well-ventilated room to prevent the fabric from getting moldy and the frame from rusting.
- The brakes and wheels wear out faster than other parts. Replace them when necessary.


Stroller Installation

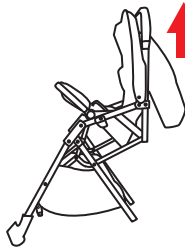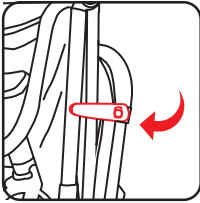


- 1. Open Stroller:** Pull the storage latch out. Lift handle until frame locks into upright position. A “click” sound means the stroller frame is open completely.

WARNING


Ensure that all the locking devices are engaged before use.

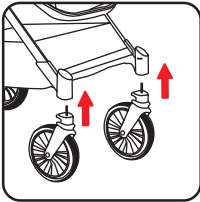

- 2. Front Wheels:** Insert the front wheel into the front leg. A “click” sound means the wheel is assembled completely. Repeat on the opposite side. Check that the wheels are securely attached by pulling on them. To remove the front wheel, press the release button and detach the front wheel from the front leg.

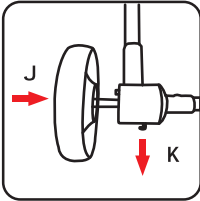


- 3. Rear Wheels :** Insert the rear wheel (J) into the rear leg. A “click” sound means the rear wheel is assembled completely. Repeat on the opposite side. Check that the wheels are securely attached by pulling on them. To remove the rear wheel, press the release button (K) and detach the rear wheel from the rear leg.

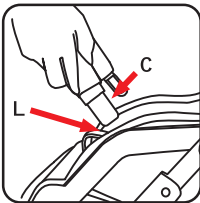


- 4. Bumper:** As shown, align the bumper ends with the bumper mounts, (L) and insert until it clicks into place. A “click” sound means the bumper is assembled completely. To remove the bumper, press the Bumper release buttons (C) and lift the bumper up.

- 5. After ensuring that the wheel have been installed and all the safety devices of the stroller are locked, push around to ensure that no exceptions then can be use.**


Stroller Installation

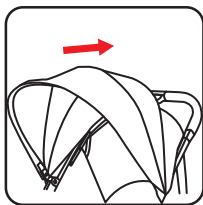

6. Use Canopy: As arrow direction, pull canopy to open it, on the contrary direction to close it.

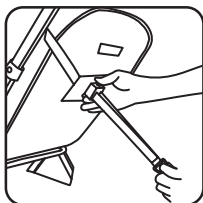


7. Adjustable Backrest: One hand holds backrest adjustment belt; the other hand holds backrest adjustment clip, then press the button and slide it up or down, can be suitable angle which make your baby feel comfortable.

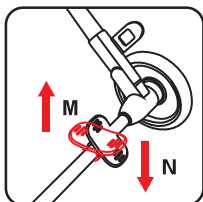



8. Rear wheel brake: As shown in the pic, when your stroller need to stop, be sure to step on the brake lever (N) to brake the stroller, on the contrary, put the brake in (M) place to release the brake.

WARNING

For the safety of the baby, when the stroller does not move, the wheels must be braked to avoid the danger of sliding.

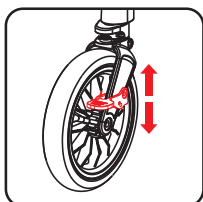


9. Front wheel brake: Press down the brake lever if stroller need to stop, and lift up the brake lever to release the brake then stroller can move.

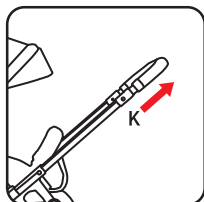
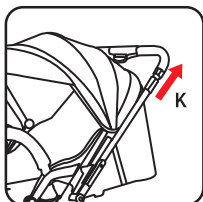


10. Handlebar reversing: The handlebar can be reversible, make it easy for your baby to face forward or face the parents. As shown, hold the reversible button (K) with both hands and lift it up, then push the handlebar forward to the other side to complete the reversing.

Stroller Installation

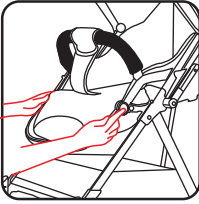


- 11.** Footrest adjustment: As shown Press button at the same time, then footrest can be adjustable.

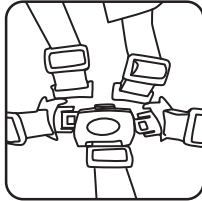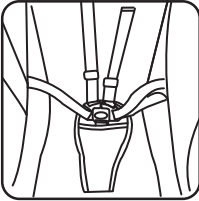


- 12.** Use Safety Buckle : put your baby's arms into left and right shoulder belt as shown, then insert the both sides to the straddling safety button and ensure that the buckle locked. The safety belt can be adjusted to be long or short as arrow shown in the pic.

⚠ WARNING

For the safety of the baby, please use the seat belt at all time. Please put the straddle strap between the legs of the baby and fasten the buckle!

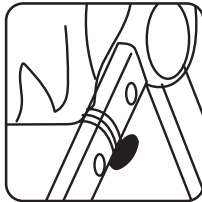

- 13.** Anti-UV shield: As shown, unzip along the canopy to remove the anti-UV shield and tighten them to the frame on both sides.

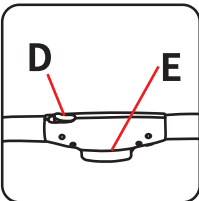

- 14.** When the stroller not use and need fold, grab the fold button, push the button (D) to left direction, and four fingers press the double lock button (E), then push down, and the frame folding complete and storage latch (F) will lock on automatically.

